

MOTOROLA GP 328 OPERATIONS GUIDE

Channel allocation:

You will have available 16 channels to allocate as you wish.

ALL Frequencies are Multicom Licensed frequencies.

Operation guide;

1. **Switch radio on.** (Turn the **Control knob** on the top left of the radio, also the volume control)
2. **Channel select.** (select your desired channel by turning the **control knob** on the top right of the radio.
3. **Talking.** (To talk you will need to press and hold down the PTT (press to talk) whilst talking. When finished talking let go of the button for your reply. **The PTT button is the largest button on the left hand side of the radio) ignore all other buttons.**
4. **Replacing your battery.** (your battery will give a small double beep to let you know that your battery is getting low and needs to be replaced. There are 2 x spring clips on the top shoulders of the batteries. Pull these down with your forefinger and thumb and pull out to remove. Do the opposite to insert the new battery.
5. **Charging Your Battery.** (batteries can be place into your charger individually or with the radio attached. Make sure that when you place your old battery into the charger that the RED charging light is lit indicating charging. The battery will take approximately 2 hours to fully charge. Please Note: PLEASE LEAVE YOUR BATTERY IN THE CHARGER FOR A MINIMUM OF 1 HOUR EVEN IF THE GREEN INDICATOR SHOWS GREEN.
6. **Accessories.** (If you are using an earpiece you will need to connect it to the radio. Connect the earpiece to the connection panel on the right hands side of the radio. You will need to gently screw the connection together. (you can use a KEY). Place the earpiece into your ear and the PTT (push to talk button) onto your collar or where desirable. AS mentioned, turn radio on, set volume and channel (IGNORE the PTT on the RADIO). Simply press the lapel mic PTT and talk into it to talk.